<u>Specifications</u>							
Model LKEH-DDDFD							
PATLITE Corporation							

Contents

1. Model Number Configuration		3/11
2. General Specifications	• • • •	3/11
3. Performance Specifications		4/11
3-1. Setup Method	• • • •	4/11
3-2. Selection Switch Setting	• • • •	5/11
3-3. Input Timing Chart	• • • •	5/11
3-4. Binary Input Mode Table	• • • •	6/11
3-5. Tone Chart (Sound/Group Type)	• • • •	6/11
3-6. Tone Chart	• • • •	7/11
3-7. Group H Rewriting Method	• • • •	8/11
3-8. Wiring Method	• • • •	10/11
4.Dimensions		11/11


PATLITE Corporation has not applied for permission to use certain copyrighted music or songs recorded

in LKEH-FA, FC and FD types outside of Japan; therefore, please contact the local copyright association

for permission before using the product in case this product is used outside of Japan.

LKEH-FE type is recommended for use outside of Japan as this model does not include copyrighted music or songs, and the permission is not required.and/or falling of the main body.

1.Model Indicating Format

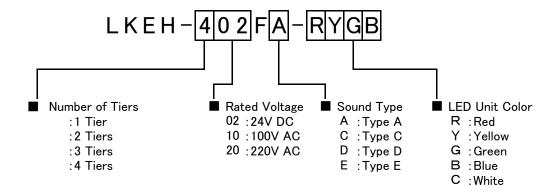

2.General Specifications

Model	LKEH-□02F□	LKEH-□10F□	LKEH-□20F□				
Rated Voltage	24V DC	100V AC 50/60Hz	220V AC 50/60Hz				
Operating Voltage Range	24V DC±10%	100V AC±10%	220V AC±10%				
	LKEH-102F: 10.6W	LKEH-110F: 17.0W	LKEH-120F: .17.0W				
Dawer Consumption	LKEH-202F: 12.4W	LKEH-210F: 20.0W	LKEH-220F: 20.0W				
Power Consumption	LKEH-302F: 14.2W	LKEH-310F: 23.0W	LKEH-320F: 23.0W				
	LKEH-402F: 16.0W	LKEH-410F: 26.0W	LKEH-420F: 26.0W				
Operating Ambient Temperature		−10°C to +50°C					
Operating Ambient Humidity	85%	RH or less (No Condensat	tion)				
Mounting Location		Indoors and Outdoors					
Mounting Direction		Upright					
Protection Rating	IP 53						
Environmental Condition	Upright Direction Only						
Insulation Resistance	More than 1M Ω at 500VDC between the terminals and the chassis						
Withstand Voltage	500V AC for 1 minute	1000V AC for 1 minute	1500V AC for 1 minute				
Withstand Voltage	Between terminal and chassis	Between terminal and chassis	Between terminal and chassis				
Vibration Resistance	19.6m/s ² (30Hz back and forth for 2h·Right and left for 2h·Up and down for 4h)						
	LKEH-102F□ 1.4kg	LKEH-110F□ 2.1kg	LKEH-120F□ 2.1kg				
Mass (Tolerance ±10%)	LKEH-202F□ 1.6kg	LKEH-210F□ 2.3kg	LKEH-220F□ 2.3kg				
Iwass (Tolerance ± 10%)	LKEH-302F□ 1.8kg	LKEH-310F□ 2.5kg	LKEH-320F□ 2.5kg				
	LKEH-402F□ 2.0kg	LKEH-410F□ 2.7kg	LKEH-420F□ 2.7kg				
	•EMC Directive						
Conformity Standards	(EN 55011, EN 610006-2)						
	•RoHS Directive(EN 50581)						
Remarks	Conforms to the CE	There are no contents of controlled substances exceeding					
I (Ciliai NS	requirements	the threshold for the RoHS Directive.					

3.Performance Specifications


Sound	Pressure Level	MAX. 105dB(Adjustable Volume)					
	Environmental Condition	Product was placed on a 300mm ² base at a distance of 1 meter from its epicenter and a sine wave of 1kHz was played back * The sound level will vary upon the message and surrounding environment.					
Sour	nd Reduction	20dB±2dB (Value based on maximum volume and sound 5 "Rapid Hi-Lo" playback)					
Li	ght Source	LED					
Illum	ination (mcd)	Red (R):2100mcd or more Amber(Y):2400mcd or more Green (G):5200mcd or more Blue(B):700mcd or more White(C):5500mcd or more					
Fla	ashing Rate	60 fps ±3					
Inp	ut Interface	Signal Wires: 16 (LED: 5 Wires/Sound: 8 Wires/Sound Reduction/Flashing Common/Common) Selection Switch, SD Card Slot					
S	ignal Input	Bit Input∕Binary Input (Selectable)※1					
Number of	f Playback Messages	Bit Input: 8 Channels / Binary Input: 32 Channels					
Cha	nnel Priority	CH8>CH7>CH6>CH5>CH4>CH3>CH2>CH1(Only bit input)					
Numb	per of Sounds	32					
Me	emory Card	Recommended SD Card: SDV-2GP(Sold Separately)					
Da	ata Format	FAT16					
Sta	art-up Time	Power Start-up: 500ms or less / Signal Line Input Delay: 300ms or less (Refer to sect. 3-3)					

X1 Level hold means input of sound reduction, which works during line signal inputted.

3-1. Setup Method

The settings for this product can be accessed from the front panel while in its installed condition. The following diagram indicates the accessable functions:

Inside the Front Cover

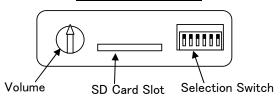


Sound Volume Adjustment

The sound can be adjusted by the volume control.


- Sound Playback Combination Method
 - By using an SD Card, the tones in Group H can be freely combined among the available 32 tones.
- •Selection Switch

The following modes can be switched:


"Tone Group Selection," "Test Playback" and "Input Mode Switch" (DIP SW No. 4 is blank)

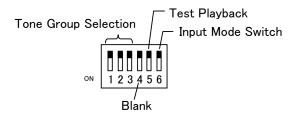

3-2. Selection Switch Setting

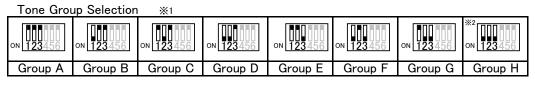




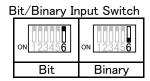



3-3. Input Timing Chart

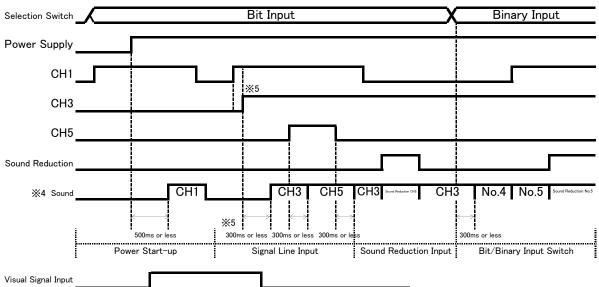



- $\frak{\%}1$ Each group has a total of 8 tones, from CH1 to CH8. Refer to "3-6. List of Tones."
- *2 Tones can be freely combined with an SD card (sold separately) and transferred to group H. Refer to "3-7. Group H Rewriting Method"
- $\divideontimes 3$ In the Test Mode, the sound stored in CH1 is always played back.
- **4 Refer to the "List of Tones" section for playback sounds. (Refer to the CH number with Bit Input, and the tone number with Binary Input.)
- $300 \mathrm{ms}$ before playback, it will take about another 300 ms to activate the sound again.

3-4. Binary Input Mode Table

To select the Binary Input Mode, set DIP switch number 6 to the "ON" position.

The corresponding channels indicated below is played back for the

Binary Input Mode by short-circuiting the CH lines to the common line.

Tone No. 5 "Rapid Hi-Lo" is played back if an input not shown in the table is made.

(CH7 and CH8 are reserved for the "STOP" and "Sound Reduction Function" inputs)

Input CH			Т	Input CH								Tones									
CH1	CH2	СНЗ	CH4	CH5	CH6	CH7	CH8	Tones			CH1 CH2 CH3 CH4 CH5 CH6 CH7 CH8					ı	ones				
0									1		0				0						17
	0								2			0			0						18
0	0								3		0	0			0						19
		0							4				0		0						20
0		0							5		0		0		0						21
	0	0							6			0	0		0						22
0	0	0							7		0	0	0		0						23
			0						8					0	0						24
0			0						9		0			0	0						25
	0		0						10			0		0	0						26
0	0		0						11		0	0		0	0						27
		0	0						12				0	0	0						28
0		0	0						13		0		0	0	0						29
	0	0	0						14			0	0	0	0						30
0	0	0	0						15		0	0	O	0	0						31
				0					16							0					32

O Indicates a short-circuit between the signal line and common line.

3-5. Tone Chart (Sound/Group Type)

	01	Веер	09	Stutter + Bell	17	London Bridge	25	Amaryllis
A	02	Stutter	10	Synthesized Melody	18	Hol-Di-Li-Dia	26	Symphony No.40
	03	Bell	11	Chime	19	Mary's Lamb	27	Silent Lakeside
T	04	Yelp	12	Call Sign	20	Camptown Races	28	Mountain Musician
Y	05	Rapid Hi-Lo	13	Fur Elise	21	Cuckoo	29	Spanish Romance
P	06	Melody Chime	14	Maiden's Prayer	22	Village Blacksmith	30	,
Е	07	Synthesized Piano	15	Minuet	23	On the Avignon Bridge	31	Grandfather's Clock
	08	Synthesized Bell	16	Annie Laurie	24	Daydream Believer	32	Ave Maria
	01	Beep	09	Stutter + Bell	17	Amairo no Kami no Otome	25	I Don't Want to Miss a Thing
C	02	Stutter	10	Synthesized Melody	18	Aux Champs-Elysees	26	Yozora no Mukou
	03	Bell	11	Chime	19	Canon	27	Ai wa Katsu
Т	04	Yelp	12	Call Sign	20	La-la Sunshine	28	Truth
Y	05	Rapid Hi-Lo	13	Can't take my eyes off of You	21	Space Battleship Yamato	29	Guts Daze!!
P	06	Melody Chime	14	Top of the World	22	Oshiete	30	Odoru Ponpokorin
Е	07	Synthesized Piano	15	The Entertainer	23	Makenai de	31	Ima sugu Kiss Me
	08	Synthesized Bell	16	Amazing Grace	24	"Rocky" Theme Song	32	Haru yo, Koi

	01	Beep	09	Chime	17	Surf Tengoku, Ski Tengoku	25	Shubert's Lulluby
D	02	Stutter	10	Call Sign	18	Iro, White Blend	26	Rudolph the Red-nosed Reindeer
	03	Bell	11	Runner	19	Happy Birthday	27	She Wore a Yellow Ribbon
T	04	Yelp	12	Mamotte Agetai	20	Ні Но	28	My Darling Clementine
Y	05	Rapid Hi-Lo	13	While listening to Olivia	21	I've been working on the Railroad	29	Yellow Rose of Texas
P	06	Melody Chime	14	September	22	The Bear Song	30	Yankee Doodle
Е	07	Synthesized Piano	15	Douyobi no Koibito	23	Toys Go Cha Cha Cha	31	When the Saints Go Marching In
	08	Synthesized Bell	16	Aki no Kihai	24	Konnako Irukana	32	Londonderry Aire
	01	Beep	09	Stutter + Bell	17	Inverted Revellie	25	Annie Laurie
Е	02	Stutter	10	Synthesized Melody	18	Galactic Motor	26	London Bridge
	03	Bell	11	Chime	19	Ringing Phone	27	Mary's Lamb
T	04	Yelp	12	Call Sign	20	Two Tone	28	Camptown Races
Y	05	Rapid Hi-Lo	13	Train Ride	21	Alarm Clock	29	Amaryllis
P	06	Melody Chime	14	Galloping Hi-Lo	22	Ringing Hi-Lo	30	Symphony No.40
Е	07	Synthesized Piano	15	Alien Chatter	23	Fur Elise	31	Ave Maria
	08	Synthesized Bell	16	Falling Crystals	24	Minuet	32	Grandfather's Clock

The tone number is the binary input channel number, and it is the selection number for the group rewriting.

3-6. Tone Lists


	Group	A	В	С	D	Е		
	CH 1	Fur Elise	Mary's Lamb	Amaryllis	Grandfather's Clock	Spanish Romance		
	CH 2	Maiden's Prayer	Camptown Races	Symphony No.40	Ave Maria	Camptown Races		
	CH 3	Minuet	Cuckoo	Silent Lakeside	Daydream Believer	Minuet		
	CH 4	Annie Laurie	Village Blacksmith	Mountain Musician	London Bridge	Ave Maria		
	CH 5	London Bridge	On the Avignon Bridge	Spanish Romance	Bell	Stutter + Bell		
Α	CH 6	Hol-Di-Li-Dia	Daydream Believer	Katyusha	Yelp	Synthesized Melody		
	CH 7	Chime	Chime	Chime	Synthesized Piano	Synthesized Piano		
T	CH 8	Call Sign	Call Sign	Call Sign	Synthesized Bell	Synthesized Bell		
Y	Group	F	G	Н				
P	CH 1	Mary's Lamb	Beep	Camptown Races				
Е	CH 2	Symphony No.40	Stutter	Cuckoo				
	CH 3	Hol-Di-Li-Dia	Bell	Katyusha				
	CH 4	Daydream Believer	Yelp	Grandfather's Clock				
	CH 5	Rapid Hi-Lo	Rapid Hi-Lo	London Bridge				
	CH 6	Melody Chime	Melody Chime	Mary's Lamb				
	CH 7	Synthesized Piano	Synthesized Piano	Silent Lakeside				
	CH 8	Synthesized Bell	Synthesized Bell	Mountain Musician				
	Group	A	В	С	D	Е		
C	CH 1	Can't Take My Eyes off of You	Canon	I Don't Want to Miss a Thing	Ima sugu Kiss Me	Spanish Romance		
	CH 2	Top of the World	La-la Sunshine	Yozora no Mukou	Haru yo, Koi	Camptown Races		
T	CH 3	The Entertainer	Space Battleship Yamato	Ai wa Katsu	Space Battleship Yamato	Minuet		
Y	CH 4	Amazing Grace	Oshiete	Truth	La-la Sunshine	Ave Maria		
P	CH 5	Amairo no Kami no Otome	Makenai de	Guts Daze!!	Can't Take My Eyes off of You	Stutter + Bell		
	CH 6	Aux Champs-Elysees	"Rocky" Theme Song	Odoru Ponpokorin	"Rocky" Theme Song	Synthesized Melody		
Е	CH 7	Chime	Chime	Chime	Chime	Chime		
	CH 8	Call Sign	Call Sign	Call Sign	Call Sign	Call Sign		

_				T	1	
	Group	F	G	Н		
С	CH 1	Beep (slow intermittent horn)	Odoru Ponpokorin	Rara Sanshain		
	CH 2	Stutter (rapid intermittent horn)	Aiwa Katsu	Uchuusenkan Yamato		
ΙΤΙ	CH 3	Stutter + Bell	Truth	Odoru Ponpokorin		
Ϋ́	CH 4	Synthesized Melody	Les Champs-Elysees	Imasugu Kisu Mi		
P	CH 5	Synthesized Piano	Amazing Grace	Amairono Kamino Otome		
ΙĖΙ	CH 6	Synthesized Bell	Yozorano Mukou	Les Champs-Elysees		
-	CH 7	Chime	Chime	Aiwa Katsu		
	CH 8	Call sign	Call sign	Truth		
	Group	Α	В	С	D	Е
	CH 1	Runner	Happy Birthday	She Wore a Yellow Ribbon	Yellow Rose of Texas	Runner
	CH 2	Mamotte Agetai	Hi Ho	Oh My Darling Clementine	Yankee Doodle	Iro Howaitoburendo
	CH 3	Oribiao Kikinagara	I've been working on the Railroad	Yellow Rose of Texas	When the Saints Go Marching In	Wiegenlied
	CH 4	A September	Bear Song	Yankee Doodle	Londonderry Air	Hi Ho
	CH 5	Doyoubino Koibito	Toys Go Cha Cha Cha	When the Saints Go Marching In	Beep (slow intermittent horn)	Bell (clear highpitched bell)
D	CH 6	Akino Kehai	Konnako Irukana	Londonderry Air	Stutter (rapid intermittent horn)	Yelp (rapid siren)
	CH 7	Saafu Tengoku Sukii Tengoku	Wiegenlied	Runner	Chime	Chime
T	CH 8	Iro Howaitoburendo	Rudolph the Red-nosed Reindeer	Mamotte Agetai	Call sign	Call sign
Υ	Group	F	G	Н		
Р	CH 1	Saafu Tengoku Sukii Tengoku	Doyoubino Koibito	Hi Ho		
E	CH 2	Konnako Irukana	I've been working on the Railroad	I've been working on the Railroad		
	CH 3	Oribiao Kikinagara	She Wore a Yellow Ribbon	Yankee Doodle		
	CH 4	Iro Howaitoburendo	Yankee Doodle	When the Saints Go Marching In	_	
	CH 5	Rapid Hi-Lo	Synthesized Piano	Saafu Tengoku Sukii Tengoku		
	CH 6	Melody Chime	Synthesized Bell	Iro Howaitoburendo		
	CH 7	Chime	Chime	She Wore a Yellow Ribbon		
	CH 8	Call sign	Call sign	Oh My Darling Clementine		
	Group	Α	В	С	D	E
	CH 1	For Elise	Minuet	For Elise	Alien Chatter	Train Ride
	CH 2	Minuet	Annie Laurie	London bridge is falling down	Falling Crystals	Galloping Hi-Lo
	CH 3	Annie Laurie	Amaryllis	Mary had a little Lamb	Inverted Revellie	Inverted Revellie
	CH 4	London bridge is falling down	Symphony No.40	The camptown Races	Galactic Motor	Galactic Motor
	CH 5	Mary had a little Lamb	Grandfather's Clock	Amaryllis	Ringing Phone	Alarm Clock
Ε	CH 6	The camptown Races	Ave Maria	Grandfather's Clock	Two Tone	Ringing Hi-Lo
	CH 7	Chime	Chime	Chime	Alarm Clock	Synthesized Piano
T	CH 8	Call sign	Call sign	Call sign	Ringing Hi-Lo	Synthesized Bell
Υ	Group	F	G	Н		
Р	CH 1	Rapid Hi−Lo	Beep (slow intermittent horn)	Two Tone		
Е	CH 2	Chime	Stutter (rapid intermittent horn)	Alarm Clock		
	CH 3	Stutter (rapid intermittent horn)	Bell (clear highpitched bell)	Symphony No.40		
	CH 4	Ringing Phone	Yelp (rapid siren)	Ave Maria		/
	CH 5	Stutter + Bell	Rapid Hi-Lo	Inverted Revellie		
	CH 6	Synthesized Melody	Melody Chime	Galactic Motor		
	CH 7	Synthesized Piano	Synthesized Piano	Mary had a little Lamb		
	CH 8	Synthesized Bell	Synthesized Bell	The camptown Races		

3-7. Group H Rewriting Method

With an SD Card (sold separately), tones can be freely combined and transferred to group H. Follow the procedure below when rewriting the sound combination.

Prepare the SD card with the following data shown below.
 The file name must contain alphabetical characters. (Case Insensitive)
 The tone numbers in the text file must be designated by digits.

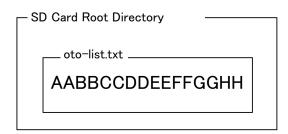


AA: CH1 Tone Number BB: CH2 Tone Number CC: CH3 Tone Number DD: CH4 Tone Number EE: CH5 Tone Number FF: CH6 Tone Number GG: CH7 Tone Number HH: CH8 Tone Number

(例) 0204081605101520 (A type)


CH1:[2]Stutter (rapid intermittent horn) CH2:[4]Yelp (rapid siren) CH3:[8]Synthesized Bell CH4:[16]Annie Laurie CH5:[5]Rapid Hi-Lo CH6:[10]Synthesized Melody CH7:[15]Minuet CH8:[20]The camptown Races

- 2. Make sure that the power is supplied to the product.
- 3. The data transfer starts automatically when the SD card is inserted into the card slot.
- 4. When the data transfer is finished, a continuous beeping sound is heard. When it is heard, pull the SD card out from the product. If there is no data transfer completion sound or any sound heard, the data transfer is not Ensure the volume is at an audible level so the beeping alarms can be heard during the rewriting procedure.
- 5. Select the tone for Group H, and confirm that the tone for each CH is stored as expected.

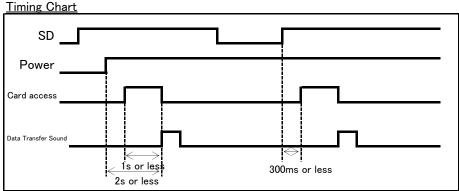


- * Do not remove the SD card until the transfer complete sound is heard when transferring the data.
- * Once the data transfer starts, no messages will play back until the transfer complete sound is played, even if a signal input is entered during the data transfer procedure.
- * If the SD card is inserted while a message is being played back, data transfer will start after the playback is finished.

3-8. Wiring Method

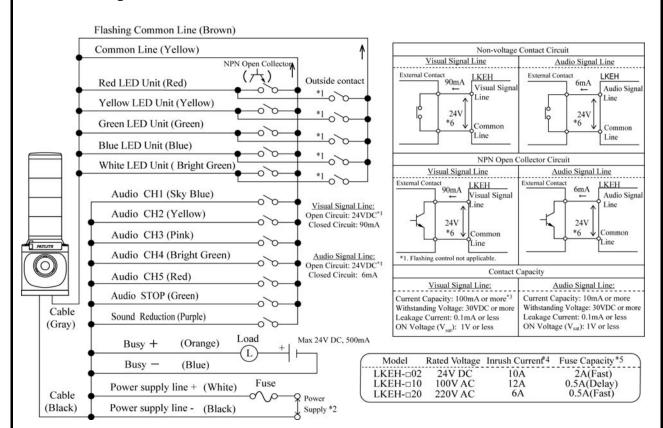

* Do not apply voltage on each signal line. Or else, there is a risk of breaking down the product.

4. Dimensions

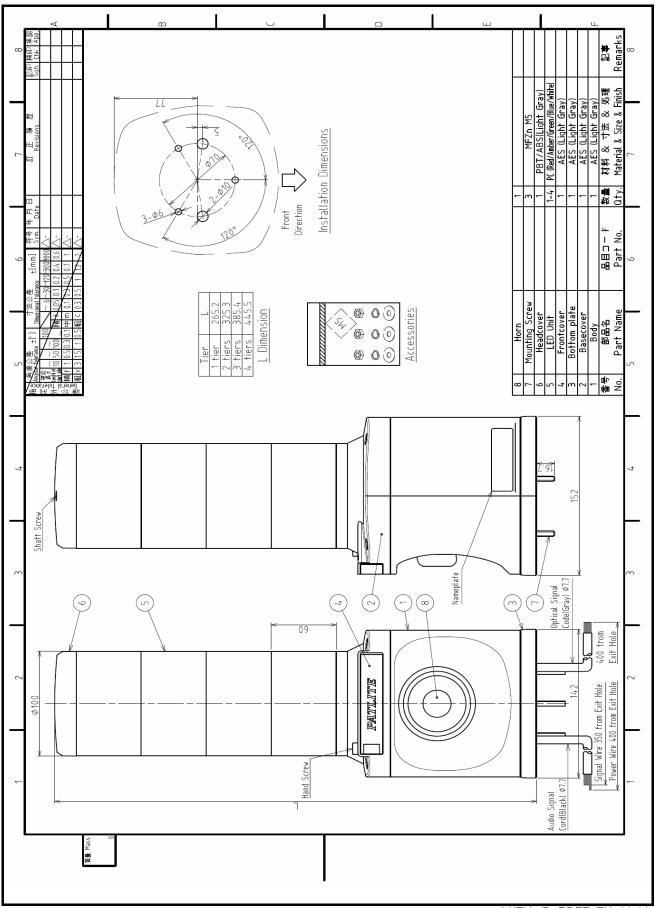

LKEH-.F.-PDFF-EN-11_11